



PANAGET


3, rue d'Orgères
35230 Bourgarré
Tél.: 02.99.05.77.77
Fax: 02.99.57.73.55
www.panaget.com




Nailed floor

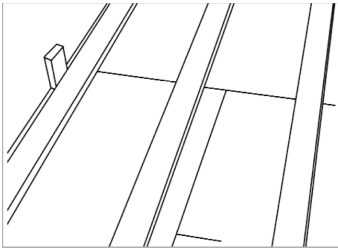


1• The strips of flooring must be fitted parallel to the largest side of the room and cross-ways to the direction of the wooden battens. Allow a maximum of 45cm between each batten, which are either fixed to the sub-floor by glue or cement (pay attention to drying time), or not fixed but placed on a fibre based underlay (BITUMEX). This system is quicker and increases sound insulation.

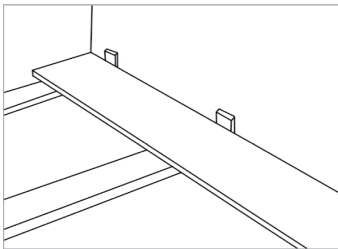

2• Lay the first row, not forgetting the expansion gap all around the edge.

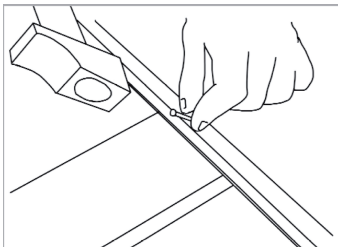

3• Nail down at an angle through the tongues (45 or 50mm flat nails) using a nail punch to avoid obstructing the position of the following boards.

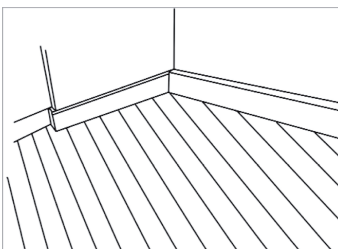

4• Fix the skirting-board in place without exerting any pressure on the wood floor.
The flooring must never be fixed against obstacles (e.g. pipes, doorway, etc.)