


FITTING INSTRUCTIONS


Glue-free assembly



1 • Roll out a dpm film. In the right hand corner of the wall.

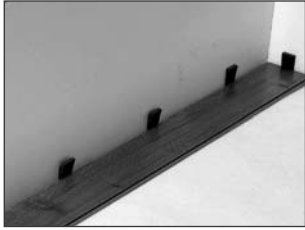

2 • Start laying the first with tongue facing the wall. Lay from right to left (remove long side tongue to leave expansion gap).

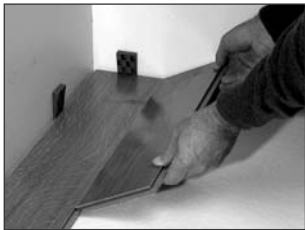

3 • Incline the second strip into the previous one. Lay it flat, click into place and close end joints with a hammer and tapping block.



4 • Using the cut strip from the first row, start the second row. Push down the strip to click into place.



5 • Tap in the end using either a tapping block, or a piece of wood in order not to damage the ends.



6 • In the last row, bring the strip into line by using a specialist metal pull-bar.

PANAGET

