


FITTING INSTRUCTIONS

Floating wood floor with glue



1 • Roll out a dpm film, then roll out the flexible acoustic insulation material. When using a rigid insulation material, lay the panels crosswise to the flooring and leave 10 mm gap between each panel and around the walls.

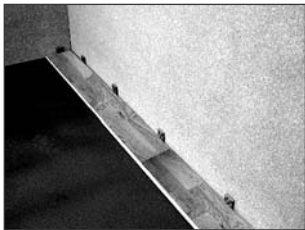

2 • Laying the wood floor. Lay the first strip, with the grooved edge against the wall. Position the wedges between the flooring strip and the wall to leave an expansion gap all round the edge of the room (1,5mm per 1m of wood flooring, minimum 8 mm).



3 • When ready to lay, carefully apply glue to the upper edge of the tongues along their whole length.



4 • Start the second row from the last strip from the preceding row, ensuring that this is at least twice the width of the strip itself (for esthetic reasons). Clean off all traces of glue immediately using a dampened cloth or sponge.



5 • Use a tapping-block to avoid damage to the tongue.ment.



6 • Cut the strip for the last row to the required width, not forgetting to allow for the expansion gap. Use a joint-puller tool to knock-in the last strip which have been tailored to fit. Remove the wedges 24 hours after laying. Fix the skirting-boards in place without exerting pressure on wood floor.

PANAGET

