




# CONCEPT BOIS MURAL VERTICAL FITTING


Concept Bois Mural can also be installed using traditional brackets.

## STEP 1 :

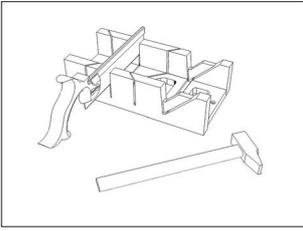


- 1• You will need...**
- Hammer and wooden tapping block
  - Handsaw or chop saw
  - Spirit level
  - Starter clips
  - Mounting clips
  - Methylated spirits and rag
  - Woodstain
  - Polymer glue.

## STEP 3 :

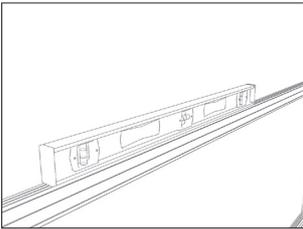


- 3• Prepare the metal frame.**
- Once this is in place, use a spirit level to check that it is flat and the metal rails are aligned.
  - Make sure the centre-to-centre distance of the horizontal rails does not exceed 60 centimetres.

## STEP 5 :

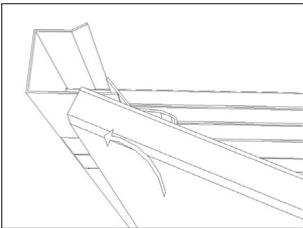

- 5• Attach the starter clips of the first strip to the left-hand fixing rail, using a tapping block to keep the cladding off the floor.**


## STEP 7 :

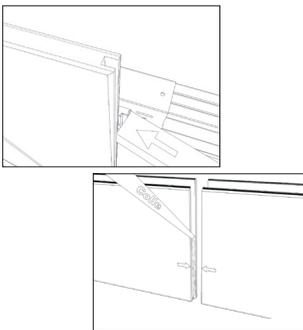

- 7• Use the tapping block to push the mounting clips into the groove and lock the strip in place.**


Repeat the last two steps for the rest of the row, add a small amount of glue on each plank tongue widthwise.

## STEP 9 :

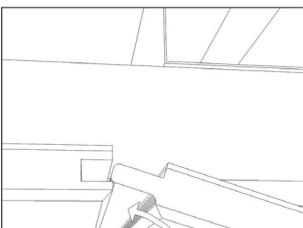


- 9• Fit the last strip.**
- Measure the distance from the penultimate strip and the finished floor and cut one centimetre off this to create an expansion joint.
  - Cut the last strip lengthwise to the required width.
  - Wipe any grease off the rails with the methylated spirits.
  - Place a dot of glue on each rail.
  - Fit the last strip and hold in place for a few moments.

## STEP 2 :

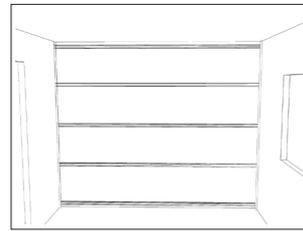


- 2• Make sure your frame is ready and any cable ducts and insulation are in position.**

## STEP 4 :

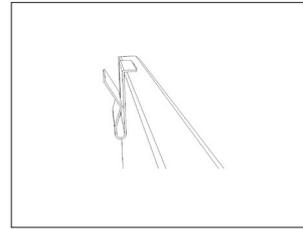


- 4• Fix the first strip in place, starting from the top.**
- Saw the tongue off the first strip.
  - Pin the starter clips to the cut section of the strip.

## STEP 6 :

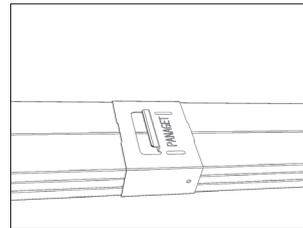


- 6• Place a row of Panaget mounting clips on each metal rail to the right of the strip.** N.B The rail sizes may vary depending on the type used. You will therefore need to tighten the clips or use a self-tapping screw.

## STEP 8 :

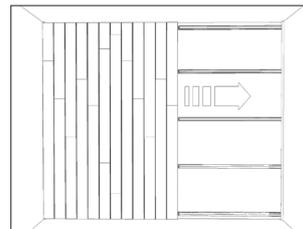

- 8• Install the following rows.**
- Start each row with the off-cut of the previous one. This should be longer than twice the width of the strip, for aesthetic reasons.
  - Fit each strip into the previous one.
  - Install the mounting clips as for the first strip.
  - Repeat until you reach the bottom of the wall.

## STEP 10 :

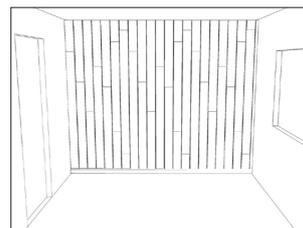

- 10• Add the finishing accessories.**
- Stain the corner beading and other unfinished surfaces.
  - Fit the beading and skirting.